


3M MP8730/MP8740 Multimedia Projector Quick Setup Instructions

Cable Connections: Always turn power off when making any cable connections.

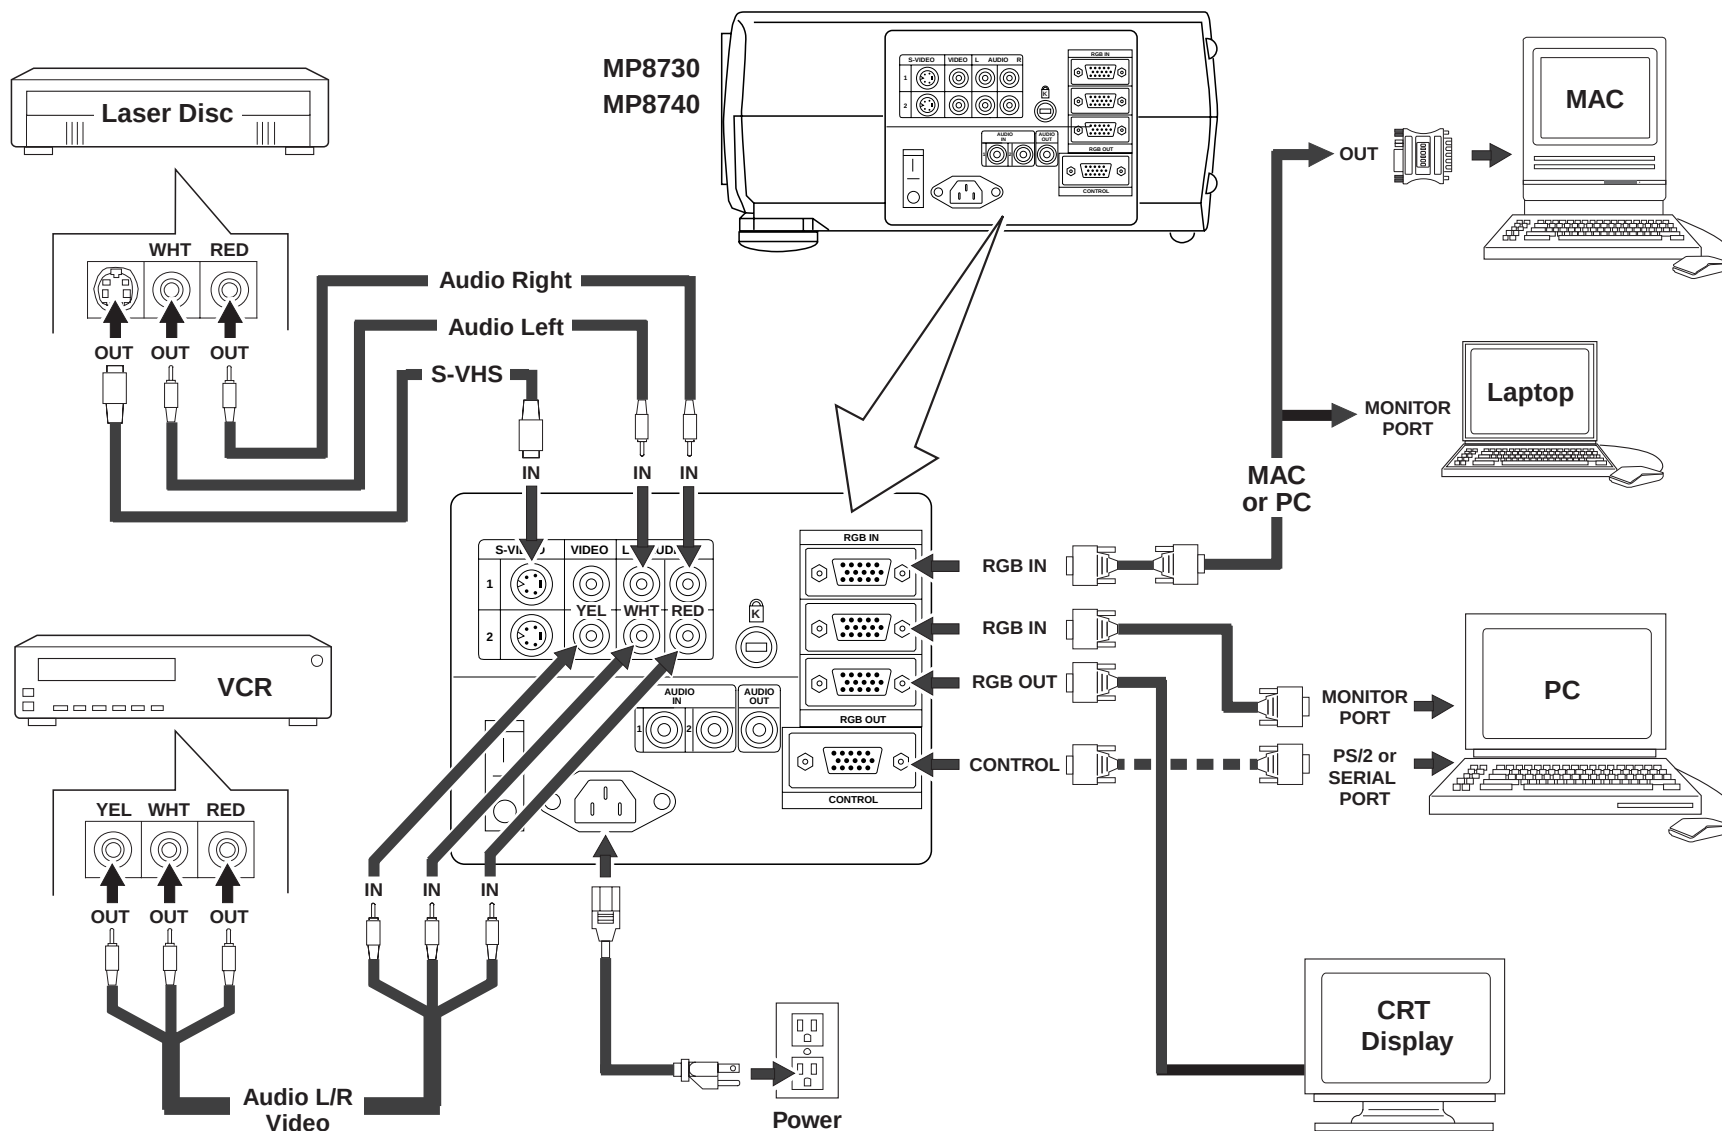

Technical Assistance & Product Information

1-800-328-1371

Internet: scvsdeps@mmm.com

3M MP8730/MP8740 Multimedia Projector Quick Setup Instructions

Project Packout



Multimedia Projector



Remote Control Transmitter
(batteries included)



Power Cord
110V – US
220V – UK, Europe



3-Conductor
Video/Audio Cable



VGA Cable
(15-15 pin M/M)



Adapter
with dip switch



Video Cable
(S-Video mini
DIN4-pin)

Packout Items not Shown:

- PS/2 mouse cable (1)
- ADB mouse cable (1)
- Serial mouse cable (1)
- Stereo mini-jack (1)

Remote Control Transmitter

STANDBY / ON button

Set main power switch to ON.
Press and hold STANDBY/ON button for
projector mode (lamp on) or standby
mode (lamp off).

FOCUS button

Press +/- to adjust image sharpness.

ZOOM button

Press +/- to adjust image size.
Note: If needed, move projector
closer/further from screen.

POSITION button

Press and light POSITION button.
Move DISK PAD to adjust horizontal/
vertical image position.

DISK PAD

Select mode, then move DISK PAD to
position image, navigate menus or control
mouse functions. To select the mode:
• Press and light POSITION button for
position mode.
• Press and light MENU ON button for
menu mode.

MENU ON button

Press and light MENU ON button to
display the Main Menu. Move DISK PAD
to select menu and/or adjust screen
values.

BLANK ON button

Press BLANK to display a blank
background with no image. Press again to
return the image to the screen.

INPUT buttons

RGB 1/2: Select computer video input
(RGB1 → RGB2 → RGB1).
VIDEO 1/2: Select video inputs
(VIDEO1 → VIDEO2 → VIDEO1).

MUTE button

Press MUTE to switch the audio
sound ON or OFF.

VOLUME button

Press +/- to adjust internal/external speaker
volume.

LASER POINTER

Press and hold down button to project laser
pointer.

CAUTION

To prevent injury to eyesight, do not point
laser beam at other persons or look directly
into laser beam.

LEFT MOUSE button



Backside
of Remote

RESET / RIGHT MOUSE button

RESET: When a menu is being displayed,
press RESET to return menu value to factory
setting.
RIGHT MOUSE: When computer image is
being displayed, press for right mouse button
function.


MOUSE ON button

Press MOUSE ON button to activate mouse
mode. Move DISK PAD to control mouse
functions.

TIMER ON / OFF button

Press TIMER to display and start the timer as
set in OPT menu setting. Note: Timer will not
display on a blank screen. To remove TIMER
display press again.

Projector Startup

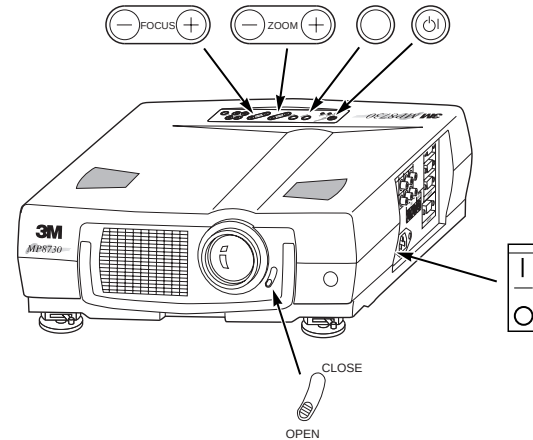

Projector Startup Procedure

1. Make all cable connections and line hookups with the power off.
2. Turn the POWER SWITCH  of the projector on. The ON indicator will light up orange.
3. Move the LENS SHUTTER CONTROL  to the open position.
4. Press the STANDBY/ON button . The ON indicator blinks (green) and then lights (green). The ON indicator will blink green during warm-up and lamp ignition.
5. Adjust the screen size using the ZOOM button .
6. Adjust the focus using the FOCUS button .
7. Turn on all connected equipment. The method of connecting various equipment, see section 2.3.
8. Press the INPUT button  on the projector or the INPUT SELECT (VIDEO or RGB) button on the remote to select the source of the signal to be projected on the screen. The selected signal input is displayed at the bottom right of the screen. The display will show the last selected input source before power was turned off.

Projector Shutdown Procedure

1. Hold the STANDBY/ON button  for 3-5 seconds. The ON indicator blinks orange and the lamp turns off. After approximately 1 minute, the fan stops and the indicator stays orange.
2. Turn the MAIN POWER SWITCH  of the projector off.

Caution

Do not turn off the POWER SWITCH before pressing the STANDBY/ON button. After the STANDBY/ON button is pressed, the fan rotates for about 1 minute to cool the projector.

3. Close the LENS SHUTTER . Push up on the lens cover switch to close.
4. Disconnect cables.